

THREE-YEAR LIMITED WARRANTY

Your new RW-P1 or RW-P2 Label Rewinder (the Unit) is guaranteed to the original end-user purchaser to be free from defects in materials and workmanship under normal use for a period of three (3) years from original date of purchase. (The AC power supply warranty period is one 1 year.) This Warranty begins when you purchase the Unit and continues for the Warranty period unless you sell or rent the Unit, in which case the Warranty terminates.

In the event Warranty service is required, please contact QuickLabel Systems for a Return Material Authorization (RMA) number and the location to which the Unit should be shipped. The Unit must be packed securely for shipment to avoid damage. Original packaging is recommended if available. Proof of original purchase must accompany the Unit. The customer assumes all costs incurred in transporting the Unit to an authorized service center. Upon examination, if the Unit is found to be defective, it will be repaired or replaced without charge during the Warranty period.

QuickLabel Systems disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for any particular purpose, and assume no responsibility or liability for any special, incidental or consequential damages.

This Warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, connection to inappropriate power source, lack of reasonable care, unauthorized modification, the affixing of any attachment not provided by QuickLabel Systems, or loss of parts. This Warranty is voided in the event any unauthorized person opens, alters, or attempts to repair the Unit.

QuickLabel Systems
an Astro-Med, Inc. Product Group

World Headquarters:
600 East Greenwich Avenue
West Warwick, RI 02893

Toll Free: 877-757-7978
Telephone: 401-828-4000
Fax: 401-822-2430

E-mail: info@QuickLabel.com
Website: www.QuickLabel.com

QUICK LABEL® SYSTEMS

The Labels You Want When You Need Them

RW-P1 Label Rewinder 120V 60Hz

RW-P2 Label Rewinder 220-240V 50Hz

The QuickLabel Systems RW-P1 and RW-P2 are low-cost Universal Label Rewinders capable of rewinding or unwinding any width labels up to 4.5" (114mm) wide at speeds of up to 10-inches per second. Label rolls up to 8" (203mm) in diameter can be accommodated. No speed adjustments are required. Torque (Rewind Force) is switch adjustable. The RW-P1 or RW-P2 (The Unit) is bi-directional and rated for continuous duty. No damage will occur even if The Unit is left "ON" indefinitely after the printer has stopped. A switch on the Power Supply Module conveniently controls the amount of rewind or unwind force. The Unit automatically adjusts itself to your printer speed and allows for back feeding labels if the printer requires this.

The Unit uses proprietary Constant Adjustable Torque™ ("CAT") technology to achieve impressive, reliable performance at an unprecedented low price.

Labels can be conveniently wound directly onto the takeup shaft with The Unit eliminating the need for cardboard rewind cores. Fins to hold a 3" core are also included. The Unit is supplied with an inner label flange to keep the edge of the labels aligned as they are being rewound. Rugged, heavy-duty steel construction allows The Unit to be simply set in place near the exit path of the label printer. Special anti-slip feet prevent the unit from moving.

UNPACKING

Verify contents of the shipping container:

- _____ RW-P1 or RW-P2 Unit
- _____ 120VAC or 220-240VAC Power Supply Module
- _____ Plastic Bag containing (1) Allen Wrench, (3) Metal Fins, (6) Slotted Screws, (1) Hook-shaped Bail, (6) Lockwashers in bag, and the User Manual (this document).

Please keep the shipping container and inserts for future use in case the unit is to be shipped or moved to a new facility.



WARNING!

**This equipment is for indoor use only.
Not for use in wet locations.**

SETUP

- (1) Place The Unit so that the rewind shaft is perpendicular to the web of the labels to be rewound, and near where the labels come out of the printer. The Unit is bi-directional, so can be operated in either direction, as you prefer. See Step 6.
- (2) Verify that the Power Switch (0 - 1) on the rear of The Unit is in the 0 (OFF) position.
- (3) Set the VOLT CHANGE SW slide switch on the Power Supply Module to 4.5 as an initial setting.
- (4) Insert the Power Cord into the Power Jack on the rear of The Unit.
- (5) Plug the Power Supply Module into a suitable 120 VAC / 60Hz electrical outlet. It can be left plugged in at all times.
- (6) The Rewinder has a combination Power and Direction Switch on the rear panel. The Center Position of the Switch is "OFF" (0). To make the Rewinder run to the right (looking from the rear of the Rewinder), press the Power / Direction Switch in the direction of the right arrow. To make the Rewinder run to the left, press the Power / Direction Switch in the direction of the left arrow.

LABEL REWINDING

Rewinding Directly Onto the Shaft - "Coreless" (See Fig. 2)

- (1) Slide the hook-shaped metal Bail onto The Unit Shaft. The straight end goes into the hole in the plastic Flange plate. The curved end fits into the small hole in the outer end of the Shaft.
- (2) Insert the label web under the metal Bail and turn the rewind Shaft by hand to secure the labels.
- (3) Place The Unit Power Switch (0 - 1) in the 1 (ON) position. If necessary, reverse The Unit rotation direction as described in SETUP section, step 6.
- (4) Start the printer and observe that the labels are being rewound correctly. You can adjust the VOLT CHANGE SW slide switch on the Power Supply Module to provide more or less rewind force. A lower numerical setting results in less force and a higher numerical setting results in greater force.
- (5) When rewinding is finished, place The Unit Power Switch (0 - 1) in the 0 (OFF) position.
- (6) To remove the labels, first pull out the hook-shaped Bail from the center of the label roll. Then remove the labels.

Rewind onto a 3" Cardboard Core (See Fig. 1)

- (1) To use a 3" cardboard core, install the three stainless steel Fins onto the Shaft of The Unit using the six screws provided. DO NOT USE THE LOCKWASHERS. The curved sides of the Fins face the Shaft. For narrow cores, orient the Fins next to the plastic Flange. Slide an empty cardboard core over the Fins and up against the plastic Flange Plate.
- (2) If the core is too loose, remove one of the Fins and place a supplied Lockwasher on each screw between the vane and the shaft. Retighten the screws securely. Add Lockwashers under additional Fins if necessary.
- (3) Use a piece of masking tape to secure the label web to the cardboard.
- (4) Place The Unit Power Switch (0 - 1) in the 1 (ON) position. If necessary, reverse

The Unit rotation direction as described in SETUP section, step 6.

- (5) Start the printer and observe that the labels are being rewound correctly. You can adjust the VOLT CHANGE SW slide switch on the Power Supply Module to provide more or less rewind torque.
- (6) When rewinding is finished, place The Unit's Power Switch (0 - 1) in the 0 (OFF) position.
- (7) Slide the cardboard core and the labels off The Unit.

UNWINDING LABELS

- (1) Verify that The Unit's Power Plug is set to wind away from the printer (See SETUP section, step 6). Place the Power Switch (0 - 1) to the 0 (OFF) position and set the VOLT CHANGE SW to 1.5.
- (2) Slide the roll of labels to be unwound over the Fins on the Rewind Shaft and up against the plastic Flange Plate.
- (3) Feed the labels into the printer and start the printer.
- (4) To provide a small amount of back tension on the label supply roll, place The Unit Power Switch (0 - 1) in the 1 (ON) position.

MAINTENANCE

The Unit requires no periodic or preventative maintenance.

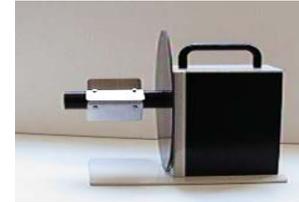


Fig. 1 The Unit with Fins installed to accept a standard 3" core for rewinding or unwinding.



Fig. 2 The Unit shown with supplied Bail for direct "on-shaft," "coreless" label rewinding.